



# A76XX Series\_ LBS\_Application Note

LTE Module

## **SIMCom Wireless Solutions Limited**

SIMCom Headquarters Building, Building 3, No. 289 Linhong  
Road, Changning District, Shanghai P.R. China

Tel: 86-21-31575100

[support@simcom.com](mailto:support@simcom.com)

[www.simcom.com](http://www.simcom.com)

<b>Document Title:</b>	A76XX Series_LBS_Application Note
<b>Version:</b>	1.04
<b>Date:</b>	2023.04.26
<b>Status:</b>	Released

## GENERAL NOTES

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

## COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED. COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION, INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

### **SIMCom Wireless Solutions Limited**

SIMCom Headquarters Building, Building 3, No. 289 Linhong Road, Changning District, Shanghai P.R. China

Tel: +86 21 31575100

Email: [simcom@simcom.com](mailto:simcom@simcom.com)

### **For more information, please visit:**

<https://www.simcom.com/download/list-863-en.html>

### **For technical support, or to report documentation errors, please visit:**

<https://www.simcom.com/ask/> or email to: [support@simcom.com](mailto:support@simcom.com)

Copyright © 2023 SIMCom Wireless Solutions Limited All Rights Reserved.

# About Document

## Version History

Version	Date	Owner	What is new
V1.00	2020.6.19	Yulong.zheng	New version
	2021.02.03	Yulong.zheng	Add support on A7678 Series
V1.01	2021.06.08	Yulong.zheng	Adjust the latitude and longitude of their format
V1.02	2021.11.16	Yulong.zheng	Modify the data description to date
V1.03	2022.02.25	Yulong.zheng	Modify the operation process of IMEI
	2022.04.12	Yulong.zheng	Modify lon_type func
V1.04	2022.11.15	Zhirong.jia	Modify lon_type parameter
	2022.03.22	Zhirong.jia	Modify lon_type parameter ranges
	2022.04.04	Zhirong.jia	Modify note

Confidential

## Scope

Based on module AT command manual, this document will introduce LBS application process. Developers could understand and develop application quickly and efficiently based on this document. This document applies to A1803S Series, A1603 Series, A1601 Series and A1802 Series.

SIMCom  
Confidential

# Contents

<b>About Document</b> .....	<b>2</b>
Version History .....	2
Scope .....	3
<b>Contents</b> .....	<b>4</b>
<b>1 Introduction</b> .....	<b>5</b>
1.1 Purpose of the document .....	5
1.2 Related documents .....	5
1.3 Conventions and abbreviations .....	5
1.4 The process of LBS AT Commands .....	6
1.5 Error Handling .....	7
1.5.1 Failed to Get Location .....	7
<b>2 AT Commands for LBS</b> .....	<b>8</b>
2.1 Overview of AT Commands for LBS .....	8
2.2 Detailed Description of AT Commands for LBS .....	8
2.2.1 AT+CLBS Base station location .....	8
<b>3 LBS Examples</b> .....	<b>11</b>
3.1 Get location .....	11

# 1 Introduction

## 1.1 Purpose of the document

Based on module AT command manual, this document will introduce LBS application process. Developers could understand and develop application quickly and efficiently based on this document.


## 1.2 Related documents

[1] A76XX Series\_AT Command Manual

## 1.3 Conventions and abbreviations

PDP Packet Data Protocol;  
LBS Location Based Services;  
URC Unsolicited result codes;  
DNS Domain Name Server;  
UTC Coordinated Universal Time;  
YYYY/MM/DD Year/Month/Day;  
HH:MM:SS Hour:Minute:Second;  
IMEI International Mobile Equipment Identity;  
UCS2 Unicode

## 1.4 The process of LBS AT Commands

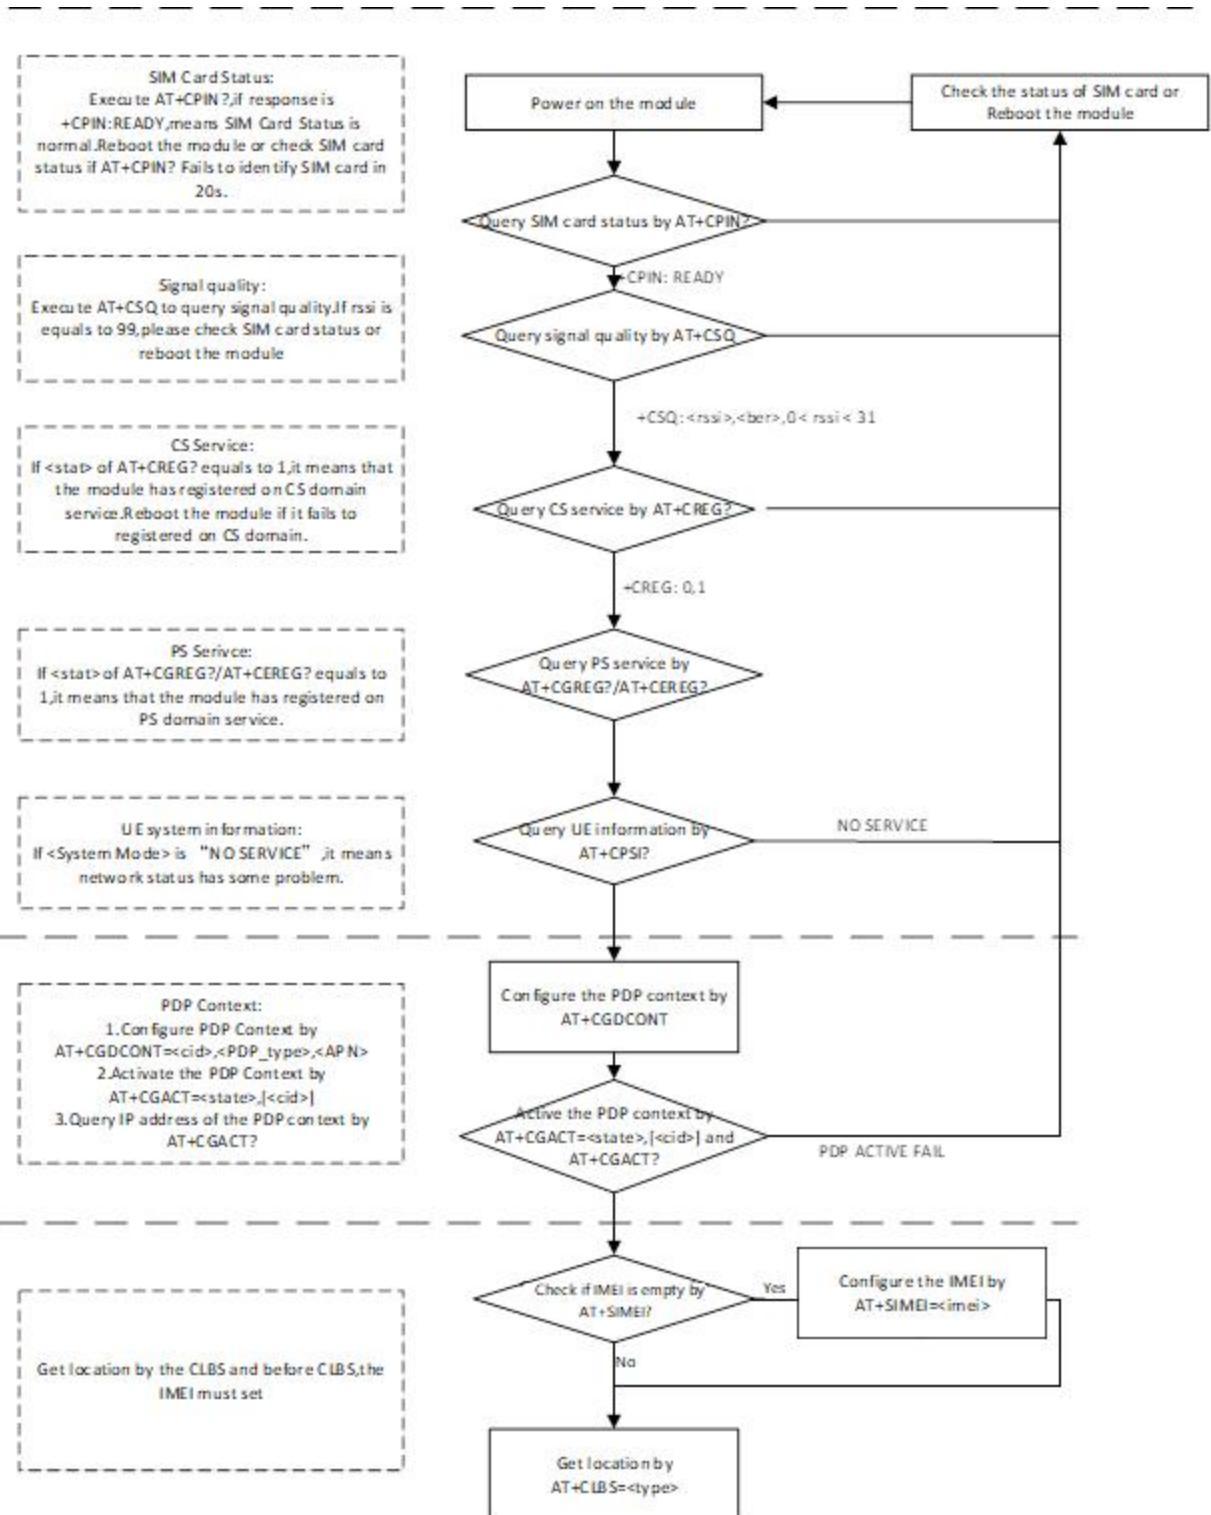

## 1.5 Error Handling

### 1.5.1 Failed to Get Location

If it is failed to get location, please check the following aspects:

1. Query the status of the specified PDP context by AT+CGACT? command to check whether the specified PDP context has been activated.
2. When the <ret\_code> in the URC :+CLBS: <ret\_code>[,<latitude>,<longitude>,<acc>,<date>,<time>] is not 0, it indicates an error code, please refer to the chapter 2.2.1.

For more details, please refer to the chapter 2.2

SIMCom  
Confidential



## 2 AT Commands for LBS

### 2.1 Overview of AT Commands for LBS

Command	Description
<b>AT+CLBS</b>	Base station location

### 2.2 Detailed Description of AT Commands for LBS

#### 2.2.1 AT+CLBS Base station location

The write command is used to base station location.

AT+ CLBS	Base station location
Test Command <b>AT+CLBS=?</b>	Response 1) <b>+CLBS:</b> (1,2,3,4,9),(1-15),(-180.000000-180.000000),(-90.000000-90.000000),(0-2)
Write Command <b>AT+CLBS=&lt;type&gt;[,&lt;cid&gt;[,&lt;longitude&gt;,&lt;latitude&gt;[,&lt;lon_type&gt;]]]</b>	Response <b>OK</b> 1)type = 1,get latitude and longitude <b>+CLBS: &lt;ret_code&gt;[,&lt;latitude&gt;,&lt;longitude&gt;,&lt;acc&gt;]</b> 2)type = 2,get detail address <b>+CLBS: &lt;ret_code&gt;[,&lt;detail_addr&gt;]</b> 3)type = 3,get access times

**+CLBS: <ret\_code>[,<times>]**

4)type = 4,get latitude longitude and date time

**+CLBS:**

**<ret\_code>[,<latitude>,<longitude>,<acc>,<date>,<time>]**

5)type = 9, report positioning error

**+CLBS: <ret\_code>**

6)

**+CLBS: <ret\_code>**

**ERROR**

Parameter Saving Mode	NO_SAVE
Maximum Response Time	9S
Reference	3GPP TS 27.007

## Defined Values

<b>&lt;type&gt;</b>	A numeric parameter which specifies the location type. 1 use 3 cell's information 2 get detail address 3 get access times 4 get latitude longitude and date time 9 report positioning error
<b>&lt;cid&gt;</b>	A numeric parameter which specifies a particular PDP context definition (see AT+CGDCONT command). 1...15
<b>&lt;longitude&gt;</b>	Current longitude in degrees.
<b>&lt;latitude&gt;</b>	Current latitude in degrees.
<b>&lt;detail_addr&gt;</b>	Current detail address. It based the UCS2 coding. Each 4 characters in the URC is for one UCS2 character.
<b>&lt;acc&gt;</b>	Positioning accuracy.
<b>&lt;lon_type&gt;</b>	The type of longitude and latitude 0 the default value(in China, it is GCJ02 coordinate, out of China, it is WGS84 coordinate) 1 (reserve) 2 change GCJ02 to WGS84(it can be only used in China)
<b>&lt;times&gt;</b>	access service times.
<b>&lt;date&gt;</b>	service date(UTC, the format is YYYY/MM/DD).
<b>&lt;time&gt;</b>	service time(UTC, the format is HH:MM:SS).
<b>&lt;ret_code&gt;</b>	The result code. 0 Success 1 Parameter error returned by server. 2 Service out of time returned by server.

- 3 Location failed returned by server.
  - 4 Query timeout returned by server.
  - 5 Certification failed returned by server.
  - 6 Server LBS error success.
  - 7 Server LBS error failed.
  - 80 Report LBS to server success
  - 81 Report LBS to server parameter error
  - 82 Report LBS to server failed
  - 110 Other Error
- 
- 8 LBS is busy.
  - 9 Open network error.
  - 10 Close network error.
  - 11 Operation timeout.
  - 12 DNS error.
  - 13 Create socket error.
  - 14 Connect socket error.
  - 15 Close socket error.
  - 16 Get cell info error.
  - 17 Get IMEI error.
  - 18 Send data error.
  - 19 Receive data error.
  - 20 NONET error.
  - 21 Net not opened.

**NOTE**

The LBS is only support in GSM/WCDMA /LTE net mode. It needs to make sure the network available before executing the AT+CLBS write command.

Lon\_type ,this parameter does not support a value of 2 at 1803S.

## 3 LBS Examples

Before LBS related operations, we should ensure the following:

Ensure GPRS network is available:

```
AT+CSQ
```

```
+CSQ: 23,0
```

```
OK
```

```
AT+CREG?
```

```
+CREG: 0,1
```

```
OK
```

```
AT+CGREG?
```

```
+CGREG: 0,1
```

```
OK
```

### 3.1 Get location

Following commands shows how to get location

```
AT+SIMEI=864424040019280
```

```
//set IMEI first if no IMEI
```

```
OK
```

```
AT+CLBS=1
```

```
//type = 1,get latitude and longitude
```

```
OK
```

```
+CLBS: 0, 29.489428,106.638084, 550
```

```
AT+CLBS=2
```

```
// type = 2,get detail address
```

```
OK
```

```
+CLBS:
```

```
0,91cd5e865e02002053575cb8533a002073899  
a6c8def002097608fd15de54e1a548c4fe1606f5  
31690e875354fe178147a7696620028897f90e8
```

520696620029

**AT+CLBS=3**

// type = 3,get access times

OK

+CLBS: 0,0

**AT+CLBS=4**

// type = 4,get latitude longitude and date time

OK

+CLBS:

0,29.489428,106.638084,550,2020/06/17,09:34:

16

**AT+CLBS=1,,,2**

// change GCJ02 to WGS84(it can be only used in China)

OK

+CLBS: 0,29.492197,106.635101,550

SIMCOM  
Confidential